


Asymmetric Link Configuration

Physical Configuration

Depicted in DIAGRAM 1 is the configuration for the Africa Telecom 98 Shownet Asymmetric connectivity.

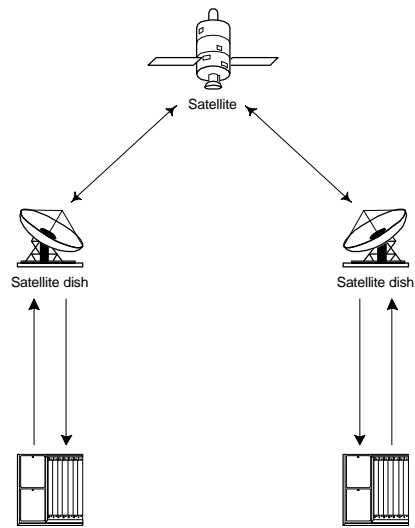

Africa Telecom 98 Router Configuration

```
interface Serial4/1/2
description TELEGLOBE ASYMM RECEIVE
transmit-interface Serial4/1/3
ip unnumbered Serial4/1/3
ip route-cache flow
no ip route-cache optimum
load-interval 30
!
interface Serial4/1/3
description TELEGLOBE ASYMM TRANSMIT
ip address 207.45.203.214 255.255.255.252
ip web-cache redirect
ip route-cache flow
no ip route-cache optimum
load-interval 30
no keepalive
```